



GO Stand - Quick Setup Guide

Hardware Parts List

Item Number	Part Number	Item Description	Total Item Quantity
1	751393400R	RH Side	1
2	751393405	Back	1
3	751393406	Bottom	1
4	751393402	Mid Shelf	1
5	751393401	Top Shelf	1
6	751393404	Top Front	1
7	751393400L	LH Side	1
8	795000630	Dowel	26
9	795006803-BK	Quickloc® Connector	24
10	795357013	Bumper Stud	5

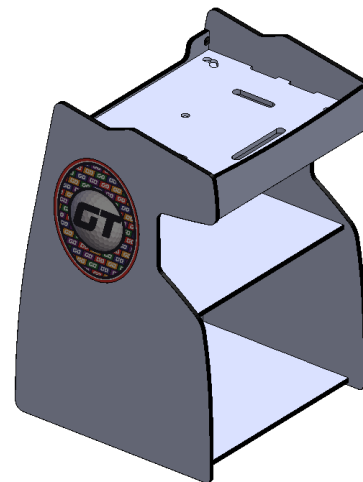


For more detailed assembly instructions, follow the QR Code to the GO Stand Install Guide.

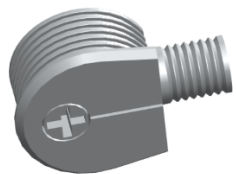


Quickloc®




Dowel

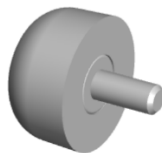


Bumper Stud

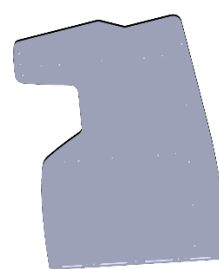


LH Side (Interior)

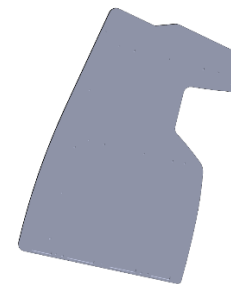


RH Side (Interior)

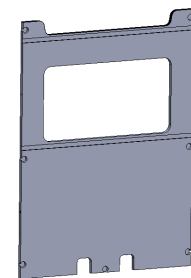


Back (Interior)

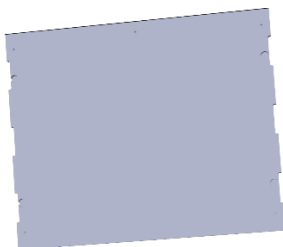


Bottom (Below)

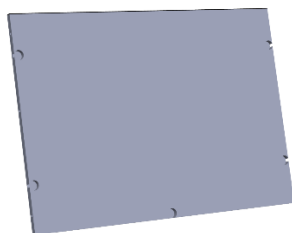

Mid Shelf (Below)

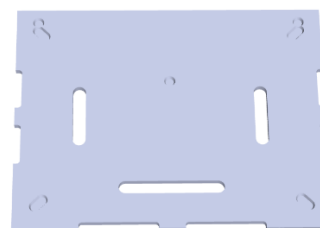


Top Shelf (Above)

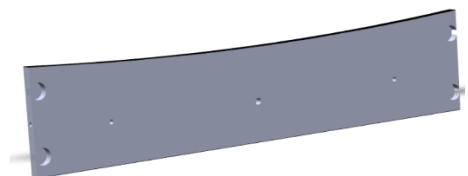

Top Front (Curve Up)

GO Stand - Quick Setup Guide

How to Use a Quickloc®


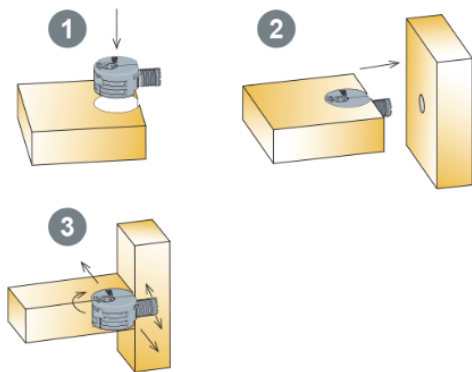


Assembly Instructions

- Set RH Side (1) flat with holes facing up.
- Attach lower Quicklocs and Dowels to Back (2) and Bottom (3) and then attach both to RH Side (1), Back first then Bottom. Attach Bumper Studs to Bottom. See Inset.

Note: Attach Quicklocs and Dowels to sides of Shelves (4) and (5) before proceeding.

- Slide Mid Shelf (4) into groove on Back (2) and attach to RH Side (1).

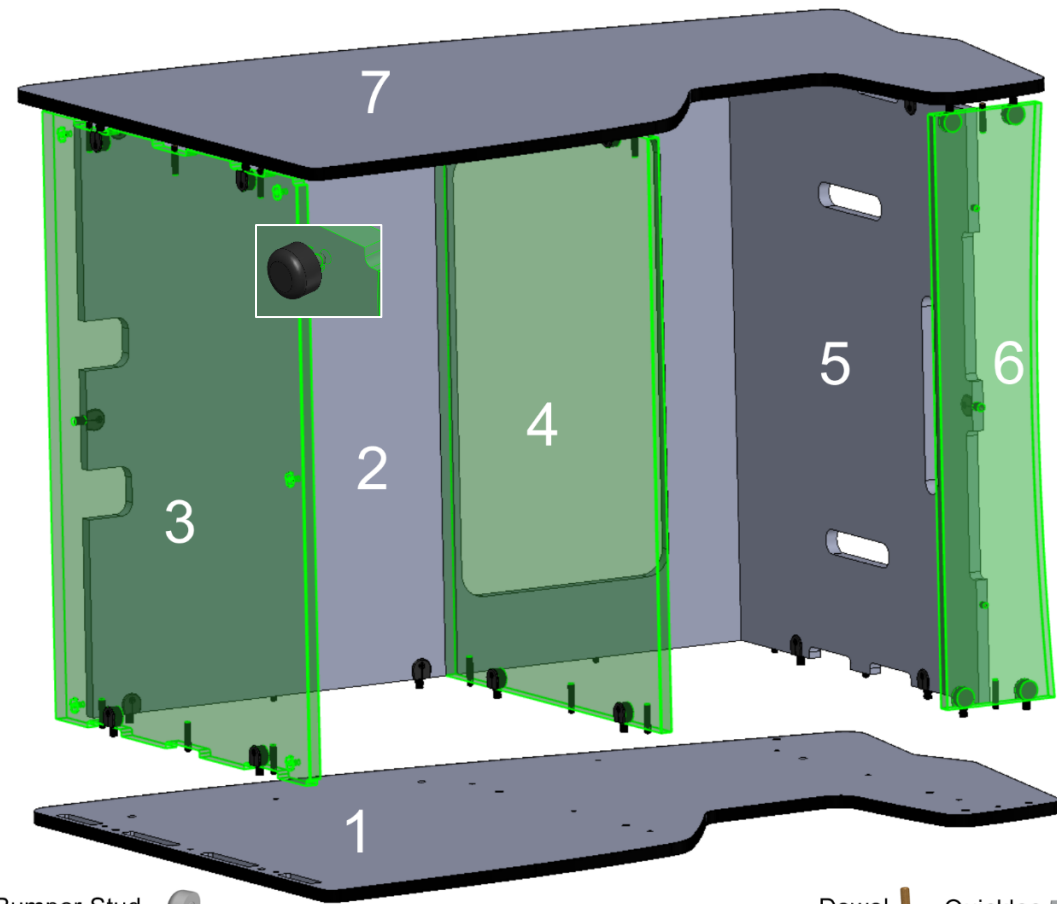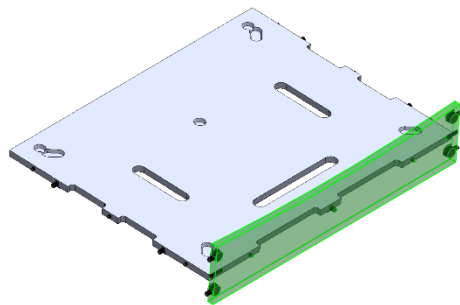

Bumper Stud 

Dowel  Quickloc 

Top Shelf Assembly: Attach Top Shelf (5) to Front (6) with curve upward. Slide rear of **Top Shelf Assembly** into groove on **Back (2)** and seat the Quicklocs and Dowels in the pre-drilled holes on **RH Side (1)**. Tighten Quicklocs on Top Shelf Assembly to RH Side (1).

- Place the **LH Side** on top of the Quicklocs and Dowels already attached to the stand. With the LH Side holes facing down it will match the **RH Side**. Tighten and check all Quicklocs.
- Place stand near electrical outlet. Move stand upright so Bumper Studs are on the floor. Adjust Bumpers as necessary. Set the GO cabinet on top shelf and drop any cables through the mouse holes in the top shelf.